

Measuring Your Tire & Wheel

TIRE DIAMETER



STEP #1
Measure the
outside diameter

Tools Needed:



TIRE WIDTH



STEP #2
Measure the tire
width

Tools Needed:



HUB LENGTH




STEP #3
Measure the hub
length from
outside bearing
to outside
bearing

Tools Needed:



BEARING INSIDE DIAMETER (I.D.)

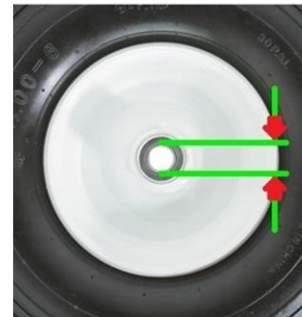

STEP #4
Measure the
inside diameter
(I.D.) of the bore

Tools Needed:

